

Beach Wagon Company®

USER GUIDE

Beach Wagon LITE®

EN



CONTENTS

EN























Contents	1
Warnings	2
Maintenance and repair	3
Mounting wheels	4
Wheel locking	5
Unfolding	6
Folding	7
Storage	8

WARNINGS

EN



IN/130.1

-  **WARNING! A CHILD'S SAFETY IS YOUR RESPONSIBILITY.**
-  **WARNING! Never leave a child unattended. It may be dangerous to leave your child unattended.**
-  **WARNING! This wagon is not intended for children under 3 years.**
-  **WARNING! Maximum load of the Beach Wagon LITE® is 80 KG. Never overload. Never load more children then the wagon is suitable for.**
-  **WARNING! Never let a person stand in the wagon.**
-  **WARNING! This wagon is not suitable for running or skating.**
-  **WARNING! Always read the instructions BEFORE use. Keep these instructions for future reference.**
-  **WARNING! Assembly of the Beach Wagon LITE® by adults only!**
-  **WARNING! This wagon shall be used with caution, since skill is required to avoid falls or collisions causing injury to the user or third parties!**
-  **WARNING! Do not attach the wagon to any other vehicle, car, bicycle, motor or animal. Do not use on highway. Only use for walking. Maximum speed 10 KM per hour.**
-  **WARNING! Avoid serious injury from falling or sliding out of the wagon.**
-  **WARNING! Always use this wagon with care to avoid injury, falling and collision.**
-  **WARNING! Always divide the load evenly over the wagon. Overloading on one side might cause tilting of the wagon.**
-  **WARNING! When the wagon is used in the sun, there is a hazard of sun burn. Use sun protection for children.**
-  **WARNING! Keep flames and heat away from the wagon.**
-  **WARNING! This wagon requires regular maintenance by the user. See the maintenance instruction in this manual.**
-  **WARNING! Ensure that all accessories are engaged / constructed according the advised instructions in the manual of these accessories before use.**
-  **WARNING! To avoid injury ensure that your child is kept away from the wagon when unfolding and folding this wagon.**
-  **WARNING! Keep plastic covers and bags away from children to avoid suffocation and hazard.**
-  **WARNING! Children should be kept on a distance of moving parts while making adjustments.**

2020-09-24

MAINTENANCE and REPAIR EN



Regular maintenance extends life span of the Beach Wagon and reduces the chance of problems.

Please have all minor repairs and maintenance done by a good bicycle shop or experienced bicycle repairer, and contact your dealer with any other problems or for parts needing to be repaired. Or contact us at www.beachwagon.company.

The high-quality materials used to make the Beach Wagon guarantee its long life span. When assembling the frame in the factory, no extra protection is applied to the parts. Premature damage to metal parts is prevented by cleaning the Beach Wagon regularly and treating all parts with acid-free vaseline or other protective substances.

Extra maintenance is necessary when the Beach Wagon comes into contact with sand or salt.

Salt should be rinsed off with clean water, and the parts coated with a protective layer in order to prevent damage to the steel parts. Take the wheels off and clean the axles with water. After cleaning make all parts dry. Please remember that if the Beach Wagon comes into contact with salt, this could penetrate into the metal tubes. To prevent excessive corrosion, tubes must be checked for damage and treated with a protective layer.

The covers are made of polyester and can be washed in the washing machine at a low temperature of 30 degrees Celsius. The polyester covers can be removed by opening the zippers and velcro for inspection and maintenance.

Check before every use of the wagon.


1. Check if all nuts and bolts are fastened securely. If necessary tighten or loosen them.
2. Treat all moving parts with vaseline or Teflon spray.
3. Check the cover and all other textile parts for damaged seams and/or zips.
4. Check the frame for damage and/or breaks.
5. Check all parts for damage/corrosion. If necessary clean the parts, and coat them with a protective layer.
6. Check the wheel bearings for corrosion. If necessary, remove the bearings from the wheel rim, clean them and apply a layer of vaseline.
7. Check whether the pull bar is well fastened and the upholding spring works well and is well fastened.
8. Repair or replace any damaged or worn parts.
9. Check if all four (4) wheels have been attached correctly and firmly. The push button must be fixed in the axle opening in order to hold the wheel.
10. The four (4) side panel clamps have been firmly fastened to prevent the panels from opening and to prevent the wagon from unintended folding.

MOUNTING WHEELS

EN



See page "Wheel locking" for fixing wheels to axle.

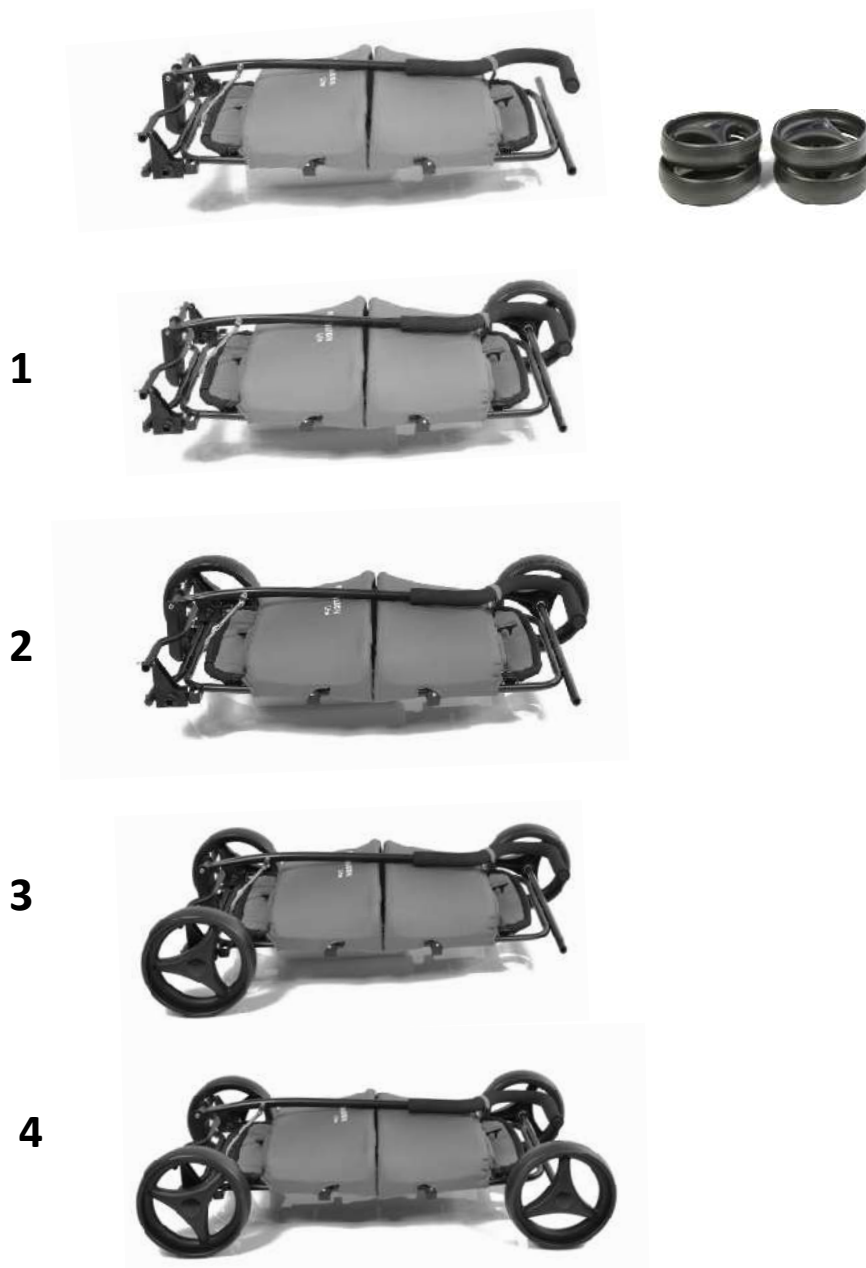

WHEEL LOCKING


EN



Rear wheel

How to attach.

- 1 Slide wheel axle (A) completely into frame axle (B).
- 2 Locking button (C) will automatically lock the wheel.
- 3 Check proper locking by pulling wheel in direction (D).

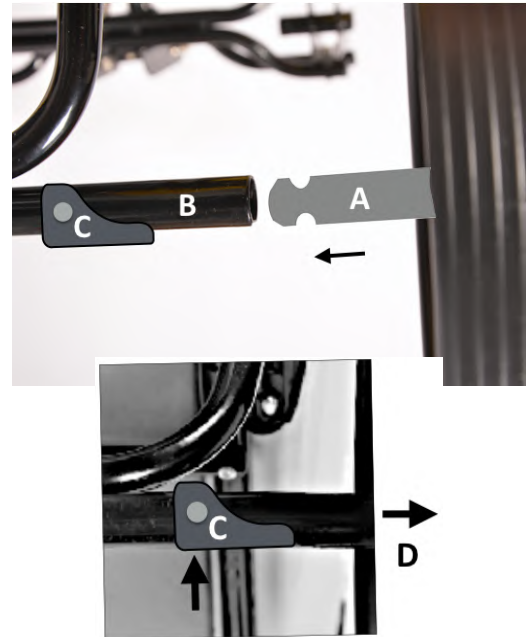


How to remove

Push button (C) and pull out wheel in outside direction of axle (D).

Front wheel.

How to attach.

- 1 Slide wheel axle (A) completely into frame axle (B).
- 2 Locking button (C) will automatically lock the wheel.
- 3 Check proper locking by pulling wheel in direction (D).

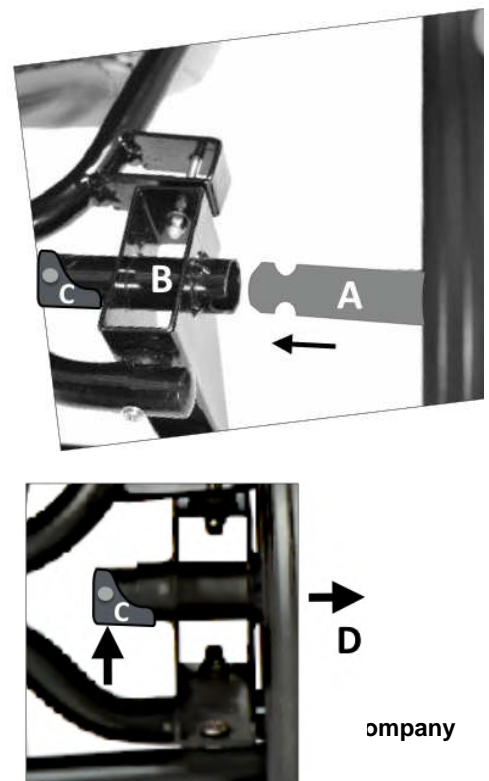

How to remove

Push button (C) and pull out wheel in outside direction of axle (D).

UNFOLDING


EN



Attach wheels: see page "Mounting wheels".



Pull bar strap

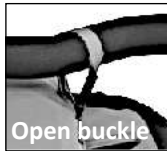

Open front and rear panel.



Do NOT open by lifting pull bar.

Open by lifting the front and rear panels.

Beware the pull bar does not hit your HEAD!



You can move pull bar strap to inside of the wagon.




Put the 4 clamps in open position.



Fix the side panels by closing the 4 clamps.

7

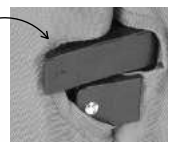

See also website for clamp closing animation.

FOLDING

EN



1

Open the 4 clamps.



4

Fold front and rear panels.

Do NOT fold by pull bar.


Beware the pull bar does not hit your HEAD!

Fold wagon by holding the front and rear panels.



2

Fold the right and left side panels.

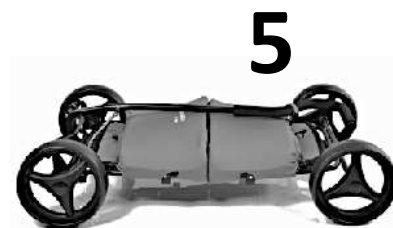


5



3

Bring the clamps in "close" position for flat folding.

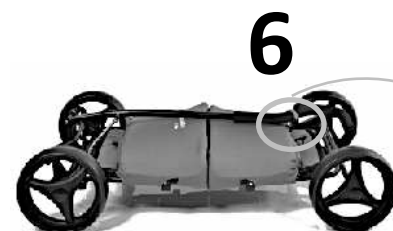

6

Close pull bar strap with the buckle to hold pull bar and wagon frame together.



Pull bar strap

Remove wheels: see page "Wheel locking".

STORAGE**EN**

Park the wagon frame on the floor or hang on the available wall hooks.





Beach Wagon LITE

BEACH WAGON COMPANY

You can find our address on
www.beachwagon.company

The Netherlands

contact@beachwagon.company
www.beachwagon.company



**BEACH
WAGON
COMPANY**

COPYRIGHT 2020

Beach Wagon Company own the intellectual property rights
in our brands and designs of the Beach Wagons and
accessories.

Registered Design