

Prod. code: 126 4920

38367 Grasleben / Germany
Telephone: +49 (0)53 57/181 81
www.sport-thieme.com

Operating/assembly instructions for exercise mat storage trolley

Thank you very much for choosing a Sport-Thieme product. Please read the instructions fully before you assemble the equipment so you can enjoy the product and its guaranteed safety.

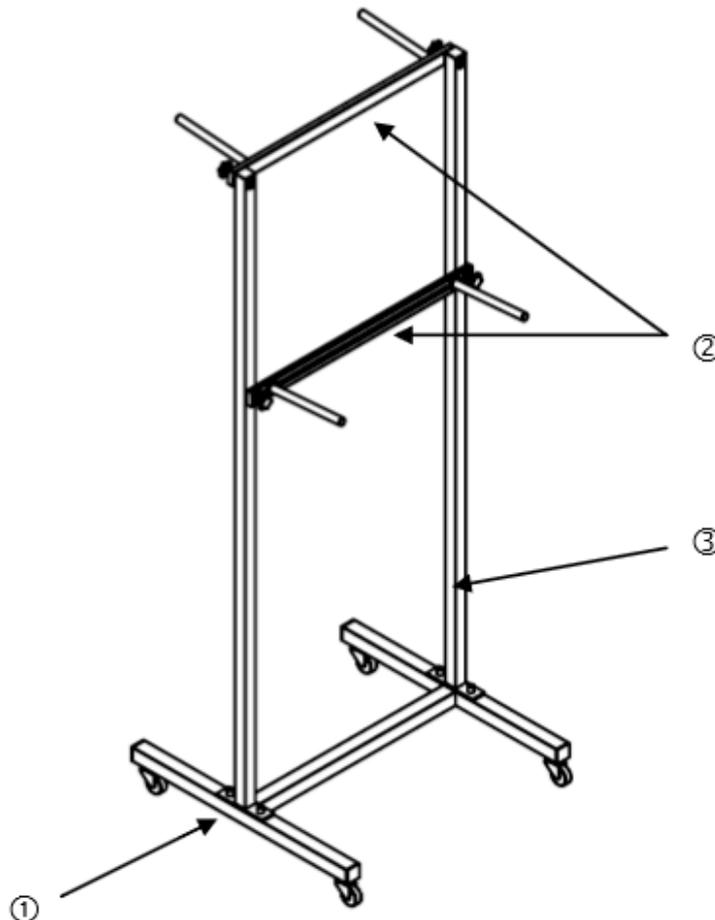


Illustration 1: mat transport trolley

When you open the package, please ensure all the necessary parts are included:

- (1) 1 x base with mounted swivel castors
- (2) 2 x aluminium rails with 4 T-nuts, 4 washers 8.5 x 34 x 1.5 and 4 bars \varnothing 14 with thread M8 (pre-assembled)
- (3) 2 x post 30 x 30
- (4) 4 x star knob screw M8 x 40
- (5) 4 x washer 8.4 x 20 x 2.0
- (6) 4 x socket head screw with nut M10 x 60
- (7) 4 x wedge plate M8


1. General

This transport trolley for exercise mats with hanging eyelets is the ideal storage option for your mats. The trolley can store and transport mats that are 1.20 or 1.80 m long. The hanging rails can be adjusted into an upper or lower position as appropriate. The hanging width can be individually adjusted to approx. 800 mm. The length of the mats should not exceed 1800 mm and the width should not exceed 900 mm! Furthermore, the mat transport trolley has abrasion-resistant swivel castors with locking brakes for clean and safe handling.


2. Assembly instructions

Position the base with mounted swivel castors on the floor so that the castors are underneath. Screw both posts ③ to the base ① using the socket head screws included ⑥ (see illustration 4). Using 2 star grip screws ④, 2 x washers 8.4 x 20 x 2.0 ⑤ and 2 wedge plates M 8 ⑦, bolt the pre-assembled aluminium rails ② on the posts ③, to the posts' threaded inserts at a height of either 1.20 m or 1.80 m (see illustration 2). As you can see in illustration 3, the rail ② must be installed to the wedge plates (and the smaller loose wedge plates ⑦) in such a way that the bars point slightly up. The loose wedge plate ⑦ is installed in the opposite direction, which guarantees a parallel surface for the star knob screw ④ (see illustration 2).


Ensure the screws are tight.

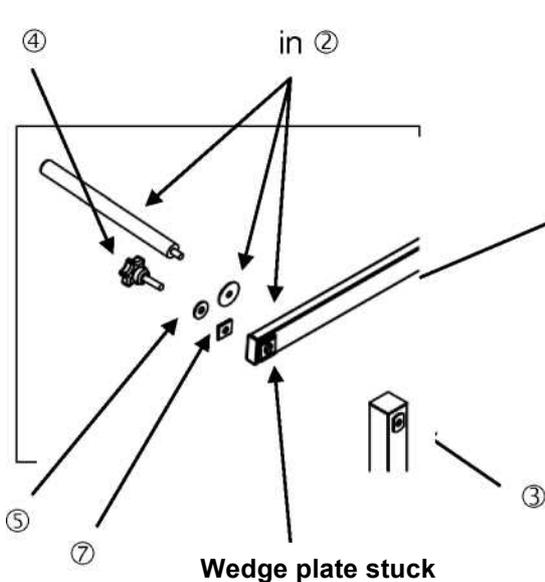

III. 2: assembly of aluminium rail

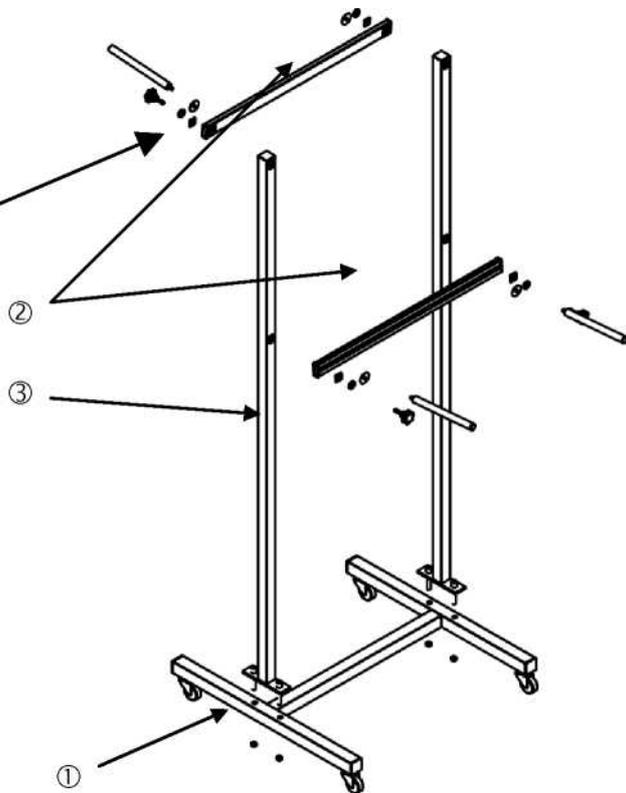

III. 1: exploded diagram

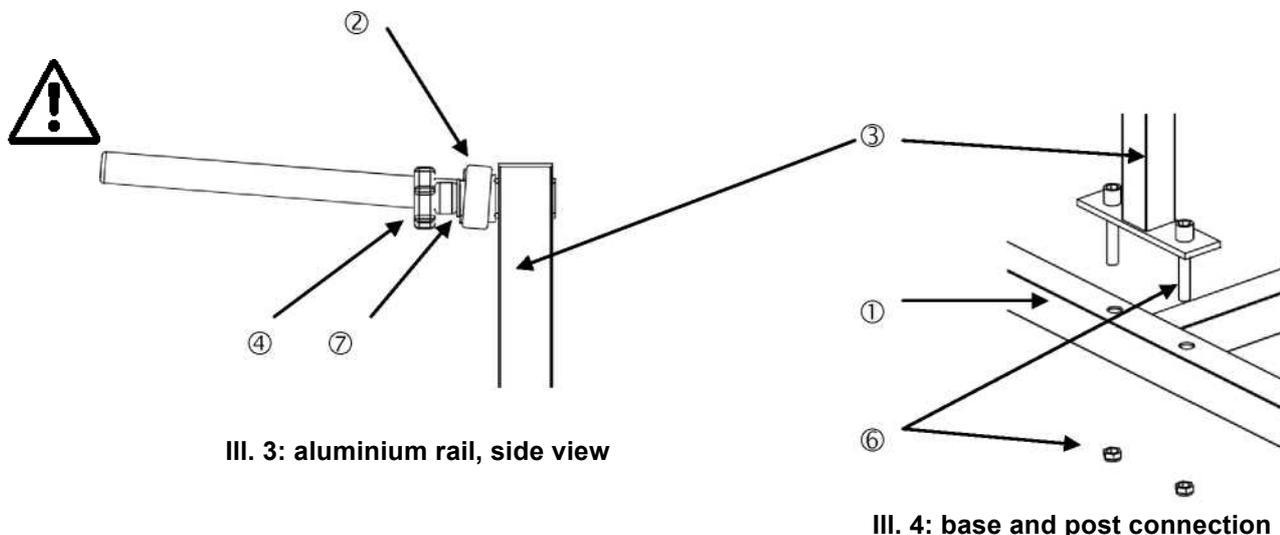

III. 3: aluminium rail, side view

III. 4: base and post connection

Caution: do not overload or climb the equipment!

Maintenance and care instructions

Instructions: Carry out a visual check at regular intervals. Due to our continuous quality control of the products, technical changes may occur which may lead to slight deviations in the instructions. Check at regular intervals that the screw connections are tight. Check the equipment for possible damage and replace worn-out parts. Ensure that moveable parts are free-moving. The equipment is designed solely for transporting exercise mats with hanging eyelets. Do not use to transport people. Only release the brakes when moving the trolley.

We are happy to answer any questions you may have.

Your **Sport-Thieme** Team